


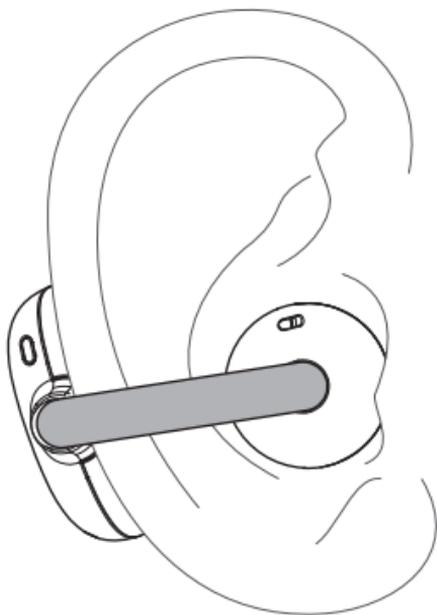

PEBBLES AIR

TRULY WIRELESS EARBUDS






PEBBLES AIR SETUP GUIDE



Scan the QR code or visit:
MEEaudio.com/PebblesAirSupport


Product Overview

EN

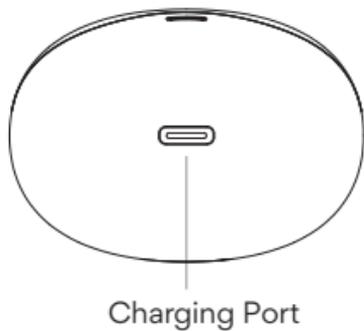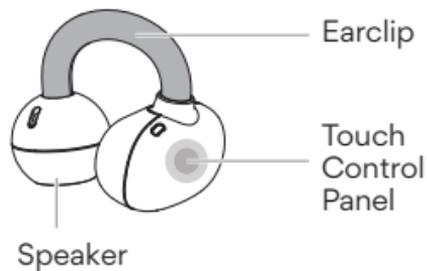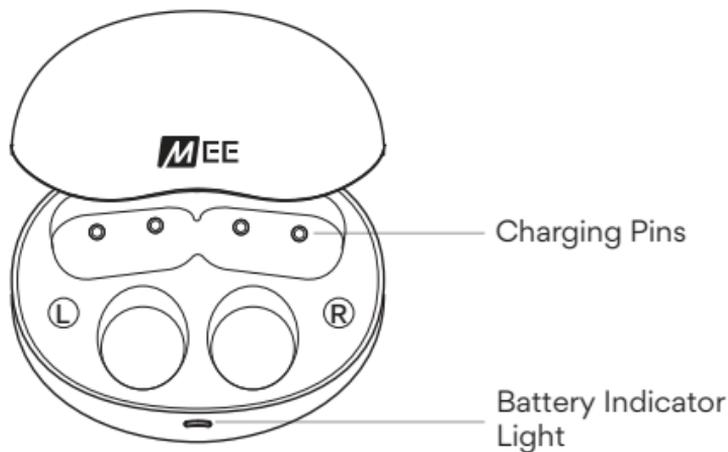


Getting Started


1. Remove film and return earpieces to case

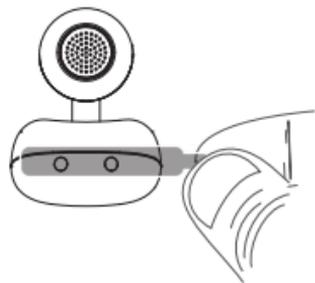

2. Charge for 2 hours

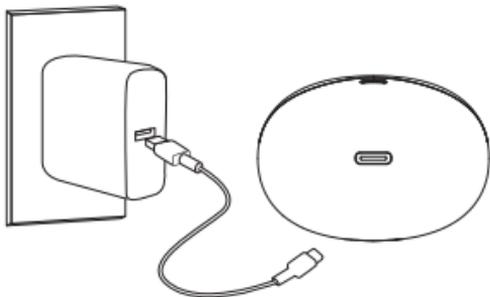

3. Remove charging cable and open lid to automatically enter pairing mode

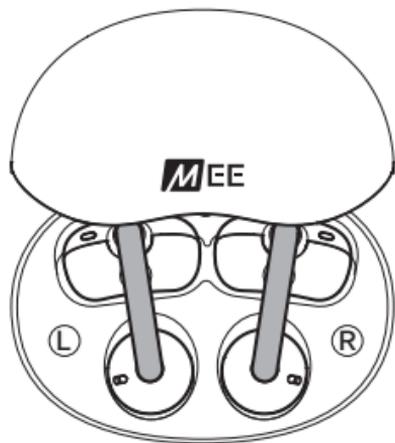

4. Open your device's Bluetooth menu and select "MEE audio PEBBLES AIR"



How to Wear

Wear the Pebbles Air correctly for the best comfort and sound quality

1. Use the left earpiece in the left ear and right in the right ear




LEFT



RIGHT

2. Ensure the "ball" containing the speaker is in front and the touch panel is behind the ear
3. With audio playing, adjust the Pebbles Air up and down as shown to find the position that gives you the best comfort and audio performance

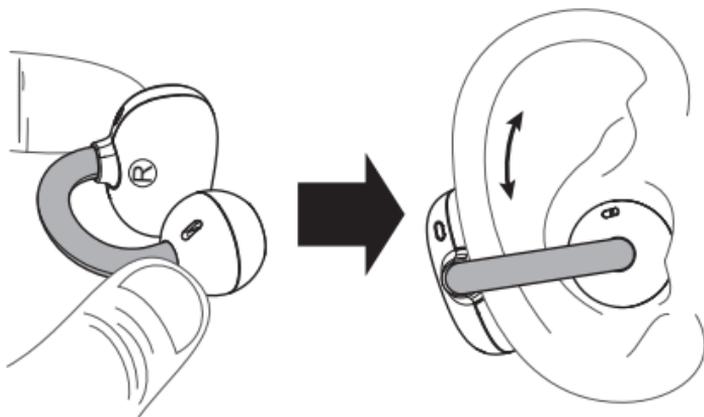

Controls




LEFT



RIGHT

	LEFT	RIGHT
Tap 1x	Volume down	Volume up
Tap 2x	Play / pause / answer phone call / hang up	
Tap 3x	Change audio mode	Activate Siri® / Google Assistant™
Tap 3x (while on a call)	Mute/unmute microphone	
Tap 4x	Enable / disable low latency (gaming) mode	
Tap 5x	Enable / disable Bluetooth Multipoint	
Tap 6x	Clear pairings and put into pairing mode	
Press and hold 2s	Previous track	Next track
Press and hold 5s	Turn both earpieces off	
Press and hold 5s (while off)	Turn left earpiece on	Turn right earpiece on

Charging Case Indicator Light

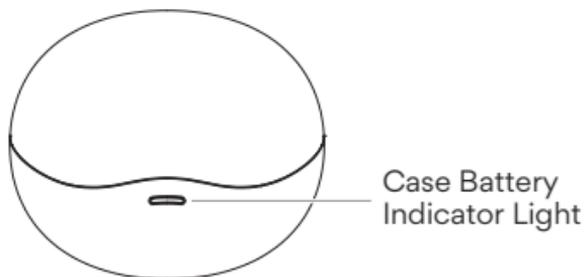

While Charging

Solid Red Light	Charging
Solid White Light	Fully Charged


Checking Remaining Battery

Make sure the charging cable is not plugged in, then open or close the case lid to activate the indicator light

Solid White	Case battery above 20%
Flashing White	Case battery below 33%
Flashing Red	Case battery below 10%
No light	Case battery 0%

Clear Pairings / Pair New Device

1. Take out both earpieces and put them in your ears

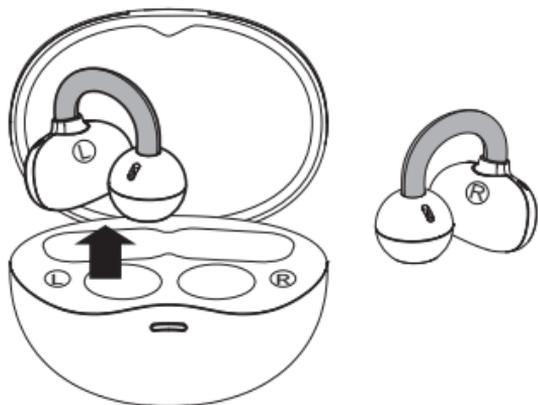

2. Tap either side 6 times to clear pairings. If successful, you will hear a voice prompt.



**Tap
6x**

3. Open your device's Bluetooth menu and select "MEE audio PEBBLES AIR"



Audio Modes

The Pebbles Air allow on-the-fly audio adjustment with 4 distinct audio modes

Cycle Audio Modes

Tap the touch panel on the LEFT EARPIECE 3x

**Tap
3x**



Available audio modes:

Balanced: provides an even mix of low, mid, and high frequencies

Bass boost: emphasizes lower frequencies over mid and high frequencies for a warmer sound

Vocal boost: gives more clarity and intelligibility to speech and vocals by enhancing the midrange


Dynamic: enhances bass and treble for a more vibrant and engaging music experience

Bluetooth Multipoint

Bluetooth multipoint can be used to connect two Bluetooth devices to your Pebbles Air simultaneously. For example, you can connect both your tablet and your phone to stream audio from your tablet and not worry about missing important phone calls.

Enable/Disable Bluetooth Multipoint

Tap the touch panel on the EITHER EARPIECE 5x

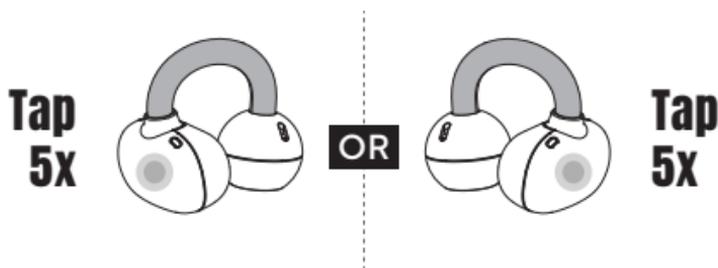

To use two Bluetooth devices when multipoint is enabled, first connect the Pebbles Air to one Bluetooth device, then temporarily turn off the Bluetooth function on that device and connect the Pebbles Air to your second Bluetooth device.

Finally, re-enable Bluetooth on your first device and restart the Pebbles Air to connect both devices in multipoint.

Troubleshooting

Most issues can be solved by resetting the Pebbles Air and re-connecting it to your device.

Factory Reset / Clear Memory

Tap the touch panel on the EITHER EARPIECE 6x

**Tap
6x**



OR




**Tap
6x**

Note: Resetting will restore all settings to their original factory defaults and erase all previous Bluetooth pairings. You'll need to delete the "MEE audio PEBBLES AIR" from your Bluetooth device list and create a new pairing before using it again.

Care and Maintenance



After Each Use:

Wipe the charging contacts on the earbuds and carrying case with a soft cloth or cotton swab. Use alcohol or diluted soapy water if needed. Do not use chemical cleaners. Allow the earpieces and case to dry completely. Do not place the Pebbles Air into the carrying case with excess water or sweat.

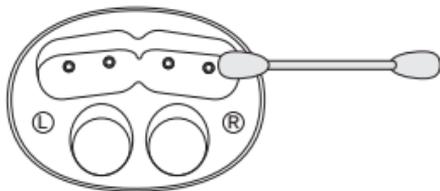

Every 1-2 Months:

Use a soft cloth or cotton swab moistened with alcohol or diluted soapy water to clean the speaker grille. If there is dust or debris inside the speaker grille, it can be removed with adhesive tape, or with a soft-bristled toothbrush. Keeping the speaker grille free of debris and earwax is key to maintaining the volume and audio performance of your earphones.

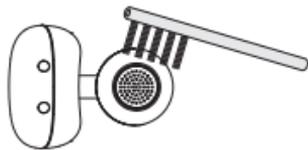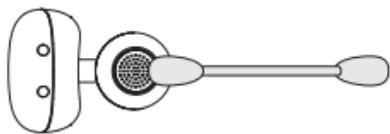

Note:

- Battery performance will be severely decreased if stored in extreme temperatures. Avoid extreme temperatures: below $-10^{\circ}\text{C}/14^{\circ}\text{F}$ or above $45^{\circ}\text{C}/113^{\circ}\text{F}$, including direct sunlight.
- The lifetime of the battery will be significantly reduced if the battery is not charged for a long time. Charge at least once a month to maintain battery health.
- If the device comes in contact with liquids, quickly wipe away. If submerged in water, do not power on until completely dry. Note: liquid submersion voids the warranty.

For Additional Support

View Our Video Setup Guide

Scan the QR code or enter the URL below into your web browser:

MEEaudio.com/PebblesAirSupport



Questions? We're Here to Help!

Phone Support: 626-965-1008
Monday ~ Friday 9:00am to 5:00pm PST

Email Support: support@meeaudio.com
All emails are responded to within 2 business days

Warranty

MEE audio products purchased from authorized resellers are covered by a 1-year manufacturer warranty (2 years in the EU). For more information, contact your local MEE audio dealer or visit MEEaudio.com/support

Warnings

This device is designed and manufactured to operate within its defined design limits. Misuse may result in electric shock or fire. Read and follow these instructions carefully.

Listening to audio at high volumes for extended periods can cause permanent hearing damage. To protect your hearing, always keep the volume at a moderate or low level. When connecting your headphones, start with the volume low, then increase gradually.

Do not use headphones while driving, cycling, operating machinery, or during any activity that requires full awareness of your surroundings. The noise isolation may block important sounds like traffic, alarms, or warning signals, potentially putting you or others at risk. Use only in safe environments where reduced hearing will not compromise safety.

Danger of explosion or fire if batteries are damaged. Never attempt to open the battery for any reason. Do not use the device if it has been crushed, pierced, or otherwise damaged in any way that could compromise the battery. Do not leave the device in any location with excessive heat including naked flames or near heat sources such as radiators and stoves. Do not expose the battery to spark, flame, or salt water.

Do not charge or use around flammable gasses, liquids, or dust as fire or explosion may occur.

There are no user replaceable/reparable parts in the device. Disassembling it will void your warranty and may cause personal injury. Changes or modifications to this unit not expressly approved by MEE audio could void the user's authority to operate the equipment.

Only use attachments/accessories specified by the manufacturer.

 **CAUTION: Choking hazard. Keep the device and packaging out of reach of children and pets.**

Compliance Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Rules

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Relocate the receiving antenna.
- Increase the separation between equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC ID: 2ABMR-EP-TW4

EU / UK Declaration of Conformity

S2E, Inc. dba MEE audio hereby declares that this wireless device is in compliance with Directive 2014/53/EU and Radio Equipment Regulations 2017. The full text of the EU declaration of conformity is available at meeaudio.com/compliance

Operating frequency range: 2402-2480 Mhz
Maximum transmission power: <20 dBm



ES DECLARACIÓN DE CONFORMIDAD UE/REINO UNIDO:

S2E, Inc. dba MEE audio manifiesta por la presente que este dispositivo inalámbrico cumple la Directiva 2014/53/UE y la Normativa sobre equipos de radio de 2017. El texto completo de la declaración de conformidad de la UE está disponible en meeaudio.com/compliance
Rango de frecuencia de funcionamiento: 2402-2480 Mhz
Potencia máxima de transmisión: <20 dBm

FR DÉCLARATION DE CONFORMITÉ UE / ROYAUME-UNI:

S2E, Inc. dba MEE audio déclare par la présente que cet appareil sans fil est conforme à la directive 2014/53/UE et à la réglementation 2017 relative aux équipements radioélectriques. Le texte intégral de la déclaration de conformité de l'UE est disponible à l'adresse meeaudio.com/compliance.
Plage de fréquences de fonctionnement : 2402-2480 Mhz
Puissance de transmission maximale : <20 dBm

Availability of Replacement Parts, Repair Services, and Maintenance Information (Québec Consumers)

In accordance with the Consumer Protection Act (Québec) and its regulations, we provide the following information regarding the availability of replacement parts, repair services, and information necessary to maintain and repair this product:

- **Replacement parts:** Partially available

Available replacement parts include replacement charging cable, replacement charging case, and replacement earpieces

- **Repair services:** Partially available
- **Maintenance and repair information:** Not available

Replacement parts that we make available are designed to be installed using commonly available tools.

For more details or to request support, please visit: meeaudio.com/qc-repair-disclosure or contact us at:

MEE audio
817 Lawson st.
Industry, CA 91748 USA
+1-626-965-1008
support@meeaudio.com

MEE audio and its logo are registered trademarks of S2E, Inc. All rights reserved.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by MEE audio is under license. Other trademarks and trade names are those of their respective owners.

Siri® is a registered trademark of Apple Inc. Google Assistant is a trademark of Google Inc.

All other trademarks are the property of their respective owners.



Manufacturer/importer
S2E, Inc. dba MEE audio
817 Lawson st., Industry, CA 91748 USA
sales@meeaudio.com

EC REP


Lienco SAS
18 Rue des Bas Rogers, 92800, Puteaux, France
ruoyu@lienco.eu

Product Name: Pebbles Air Earbuds
Model: EP-TW4
Brand: MEE audio

Made in China
Production batch: 20251001
Production date: 12-05-2025

DISPOSAL AND RECYCLING

Dispose of this product in accordance with all local laws and regulations. Because this product contains electronic components and a battery, it must be disposed of separately from household waste. Contact local authorities to learn about disposal and recycling options.

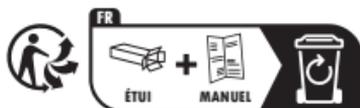

Points de collecte sur www.quefairede mesdechets.fr
Privilégiez la réparation ou le don de votre appareil !

- EN** ⚠ To prevent hearing damage, keep headphone volume below 85dB and take frequent breaks.
⚠ Do not use while driving, cycling, or operating machinery.
⚠ Danger of explosion or fire if batteries are damaged. Do not crush, pierce, or expose battery to heat, flame, sparks, or water. Do not charge or use near flammable gases, liquids, or dust.
⚠ Choking hazard: keep device and packaging away from children and pets.
- FR** ⚠ Pour éviter les dommages auditifs, gardez le volume des écouteurs en dessous de 85 dB et faites des pauses régulières.
⚠ Ne pas utiliser en conduisant, à vélo ou en utilisant des machines.
⚠ Risque d'explosion ou d'incendie si la batterie est endommagée. Ne pas écraser, percer ni exposer à la chaleur, aux flammes, aux étincelles ou à l'eau. Ne pas charger ou utiliser près de gaz, liquides ou poussières inflammables.
⚠ Risque d'étouffement : gardez l'appareil et l'emballage hors de portée des enfants et des animaux.
- DE** ⚠ Um Hörschäden zu vermeiden, halten Sie die Kopfhörerlautstärke unter 85 dB und machen Sie regelmäßig Pausen.
⚠ Nicht beim Fahren, Radfahren oder Bedienen von Maschinen verwenden.
⚠ Explosions- oder Brandgefahr bei beschädigter Batterie. Batterie nicht zerdrücken, durchstechen oder Hitze, Flammen, Funken oder Wasser aussetzen. Nicht in der Nähe von entzündlichen Gasen, Flüssigkeiten oder Staub laden oder verwenden.
⚠ Erstickungsgefahr: Gerät und Verpackung außerhalb der Reichweite von Kindern und Haustieren aufbewahren.
- ES** ⚠ Para evitar daños auditivos, mantenga el volumen de los auriculares por debajo de 85 dB y tome descansos frecuentes.
⚠ No usar mientras conduce, anda en bicicleta o maneja maquinaria.
⚠ Peligro de explosión o incendio si la batería está dañada. No aplastar, perforar ni exponer a calor, llamas, chispas o agua. No cargar ni usar cerca de gases, líquidos o polvos inflamables.
⚠ Peligro de asfixia: mantenga el dispositivo y el embalaje fuera del alcance de niños y mascotas.
- IT** ⚠ Per evitare danni all'udito, mantenere il volume delle cuffie sotto gli 85 dB e fare pause frequenti.
⚠ Non usare durante la guida, il ciclismo o l'uso di macchinari.
⚠ Rischio di esplosione o incendio se la batteria è danneggiata. Non schiacciare, forare o esporre la batteria a calore, fiamme, scintille o acqua. Non caricare o usare vicino a gas, liquidi o polveri infiammabili.
⚠ Rischio di soffocamento: tenere il dispositivo e l'imballaggio lontano da bambini e animali domestici.
- SV** ⚠ För att undvika hörselskador, håll hörlurarnas volym under 85 dB och ta regelbundna pauser.
⚠ Använd inte vid bilkörning, cykling eller maskinarbete.
⚠ Risk för explosion eller brand om batterier är skadade. Krossa, stick igenom eller utsätt inte batterier för värme, eld, gnistor eller vatten. Ladda inte eller använd nära brandfarliga gaser, vätskor eller damm.
⚠ Kvävningrisk: håll enheten och förpackningen utom räckhåll för barn och husdjur.

